



1. Volume Up / Next
2. Volume Down / Previous
3. Power On and Off / Pause
4. Loop
5. Power / Bluetooth Pairing Indicator
6. Micro USB Charging Port
7. Charging Indicator

Important safety information:

- Keep away from extreme temperatures.
- Do not use device if there's obvious damage.

Important information before use:

- Charging the speaker for more than 4 hours can damage the battery.
- Recharge the speaker when the battery is low to maximize the battery's lifespan.
- Do not fully submerge the speaker in water for an extended period of time.



How to pair the speaker with your mobile device:

1. Turn on the speaker by pressing and you will hear a musical tone.
2. Turn on "Bluetooth" function under "Settings" on your mobile device. Select "OutStyle" for pairing.
3. Once "OutStyle" is successfully connected to your mobile device you will hear a drum sound.
4. You can now enjoy music with the speaker.

How to unpair the speaker with your mobile device:

1. Go to "Bluetooth" function under "Settings" on your mobile device.
2. Select "OutStyle" and then select "forget this device". Once the speaker is unpaired you will hear a drum sound.

How to pair multiple speakers: (Requires two Portable Speakers)

1. Press and hold on both speakers to turn on.
2. Press twice on one of the speakers, they will then go into pairing mode. Once pairing is successful, you will hear a voice prompt from the main speaker.
3. Press twice on the main speaker to disconnect from twin speaker mode and play as a single speaker.

How to Use:

+	<ul style="list-style-type: none"> • Short press to turn the volume up. • Long press to skip forward to the next track.
-	<ul style="list-style-type: none"> • Short press to turn the volume down. • Long press to skip back to the previous track.
	<ul style="list-style-type: none"> • Short press to pause the track. • Long press to turn speaker on/off.
Micro USB Charging Port	<ul style="list-style-type: none"> • For power charging only, cannot transfer data. • Able to play music and charge at same time.
Blue Indicator	<ul style="list-style-type: none"> • Power on • Blinking light - unpaired; Solid light - paired
Red Indicator	<ul style="list-style-type: none"> • Charging * The red indicator will automatically turn off when the speaker is fully charged.

Specifications:

Dimensions	Ø80 x 100 mm
Weight	280g
Color	Black
Battery	1800mAh built-in li-ion battery
Charging Time	3 hours
Play Time	Up to 6 hours
Bluetooth Version	V4.0
Water Resistant Rating	IPX7
Signal-to-Noise	≥80dB
Frequency Range	100 Hz-18KHz
Working Range	10 meters
Loudspeaker Output	4Q5W
Frequency Response	100HZ-18K HZ
Distortion	< 0.5%
Heavy Bass Sound	
TWS Speakers	

The device complies with the European Directives 2014/53/EU.

At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting our environment by reusing, recycling, or utilizing old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located. Subject to change.